


TYPICAL ELEVATION
BUTT HINGE / CAMS
WITH OPTIONAL SCREEN

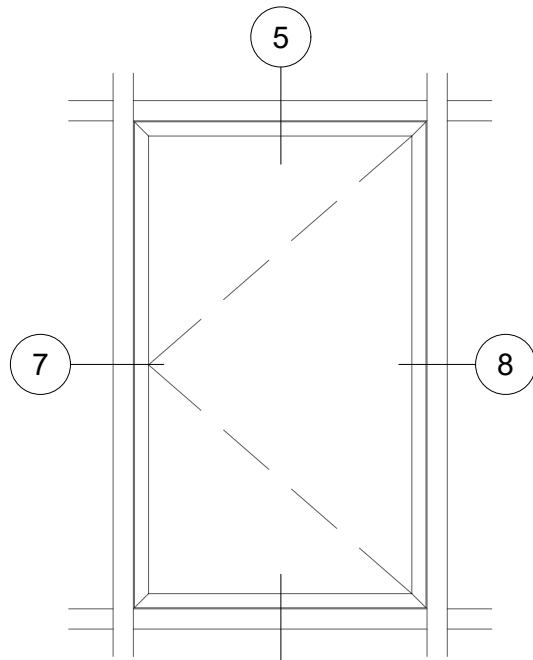


TYPICAL ELEVATION
BUTT HINGE / ROTO-MPL
WITH OPTIONAL SCREEN


1350 SERIES INSERT VENT DUAL GLAZED

CASEMENT


900RW INSTALLATION

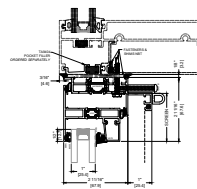


1
HEAD
FLATBACK INSTALLATION
STANDARD

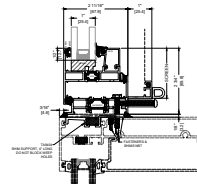

2
SILL
FLATBACK INSTALLATION
STANDARD

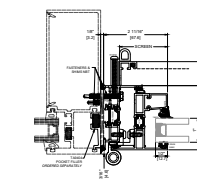


3
FLATBACK INSTALLATION
STANDARD

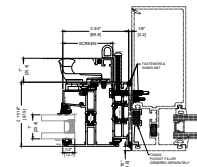


4
JAMB
FLATBACK INSTALLATION
STANDARD


CURTAIN WALL INSTALLATION

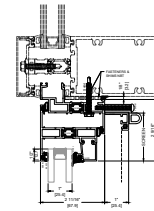


1A
HEAD
CURTAIN WALL INSTALLATION
STANDARD

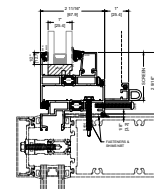

2A
SILL
CURTAIN WALL INSTALLATION
STANDARD

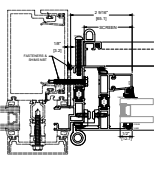


3A
CURTAIN WALL INSTALLATION
STANDARD

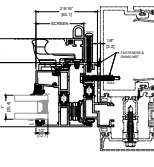


4A
JAMB
CURTAIN WALL INSTALLATION
STANDARD


STOREFRONT INSTALLATION

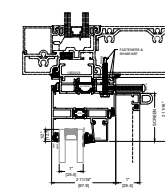


1B
HEAD
SF ADAPTOR
STANDARD

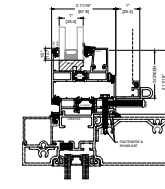

2B
SILL
SF ADAPTOR
STANDARD

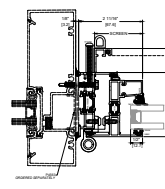


3B
SF INSTALLATION
STANDARD

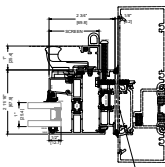


4B
JAMB
SF INSTALLATION
STANDARD


900RW INSTALLATION

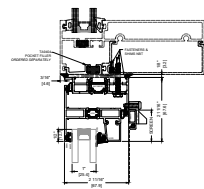


5
HEAD
FLATBACK INSTALLATION
STANDARD

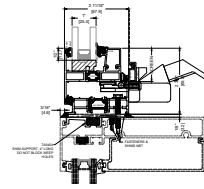

6
SILL
FLATBACK INSTALLATION
STANDARD

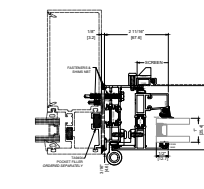


7
FLATBACK INSTALLATION
STANDARD

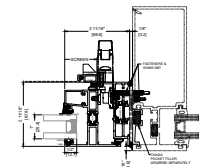


8
JAMB
FLATBACK INSTALLATION
STANDARD


CURTAIN WALL INSTALLATION

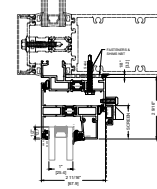


5A
HEAD
CURTAIN WALL INSTALLATION
STANDARD

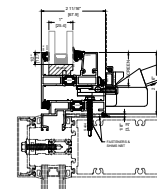

6A
SILL
CURTAIN WALL INSTALLATION
STANDARD

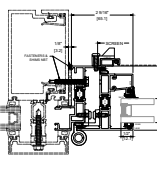


7A
CURTAIN WALL INSTALLATION
STANDARD

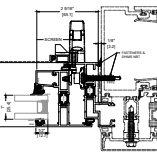


8A
JAMB
CURTAIN WALL INSTALLATION
STANDARD


STOREFRONT INSTALLATION

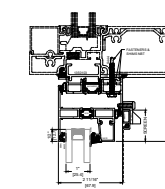


5B
HEAD
SF ADAPTOR
STANDARD

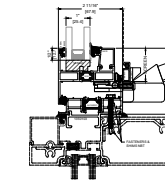

6B
SILL
SF ADAPTOR
STANDARD

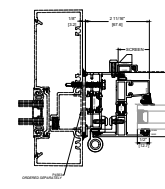

7B
SF INSTALLATION
STANDARD

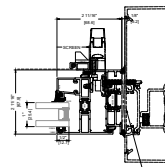

8B
JAMB
SF INSTALLATION
STANDARD

BUTT HINGE / CAMS

BUTT HINGE / ROTO with MPL



OPTIONAL GLAZING

GLASS SHOWN DOES NOT NECESSARILY REPRESENT FINAL CONFIGURATION.
CONSULT GLASS MANUFACTURER FOR SPECIFIC GLASS MAKE UP.



LAST REVISED: 9/27/2023