

# TU9450\_E9451

System: \900RW


Typical Use Vertical

Reinforcement None

I = 3.02

S = 1.28


Alloy: 6063 T6

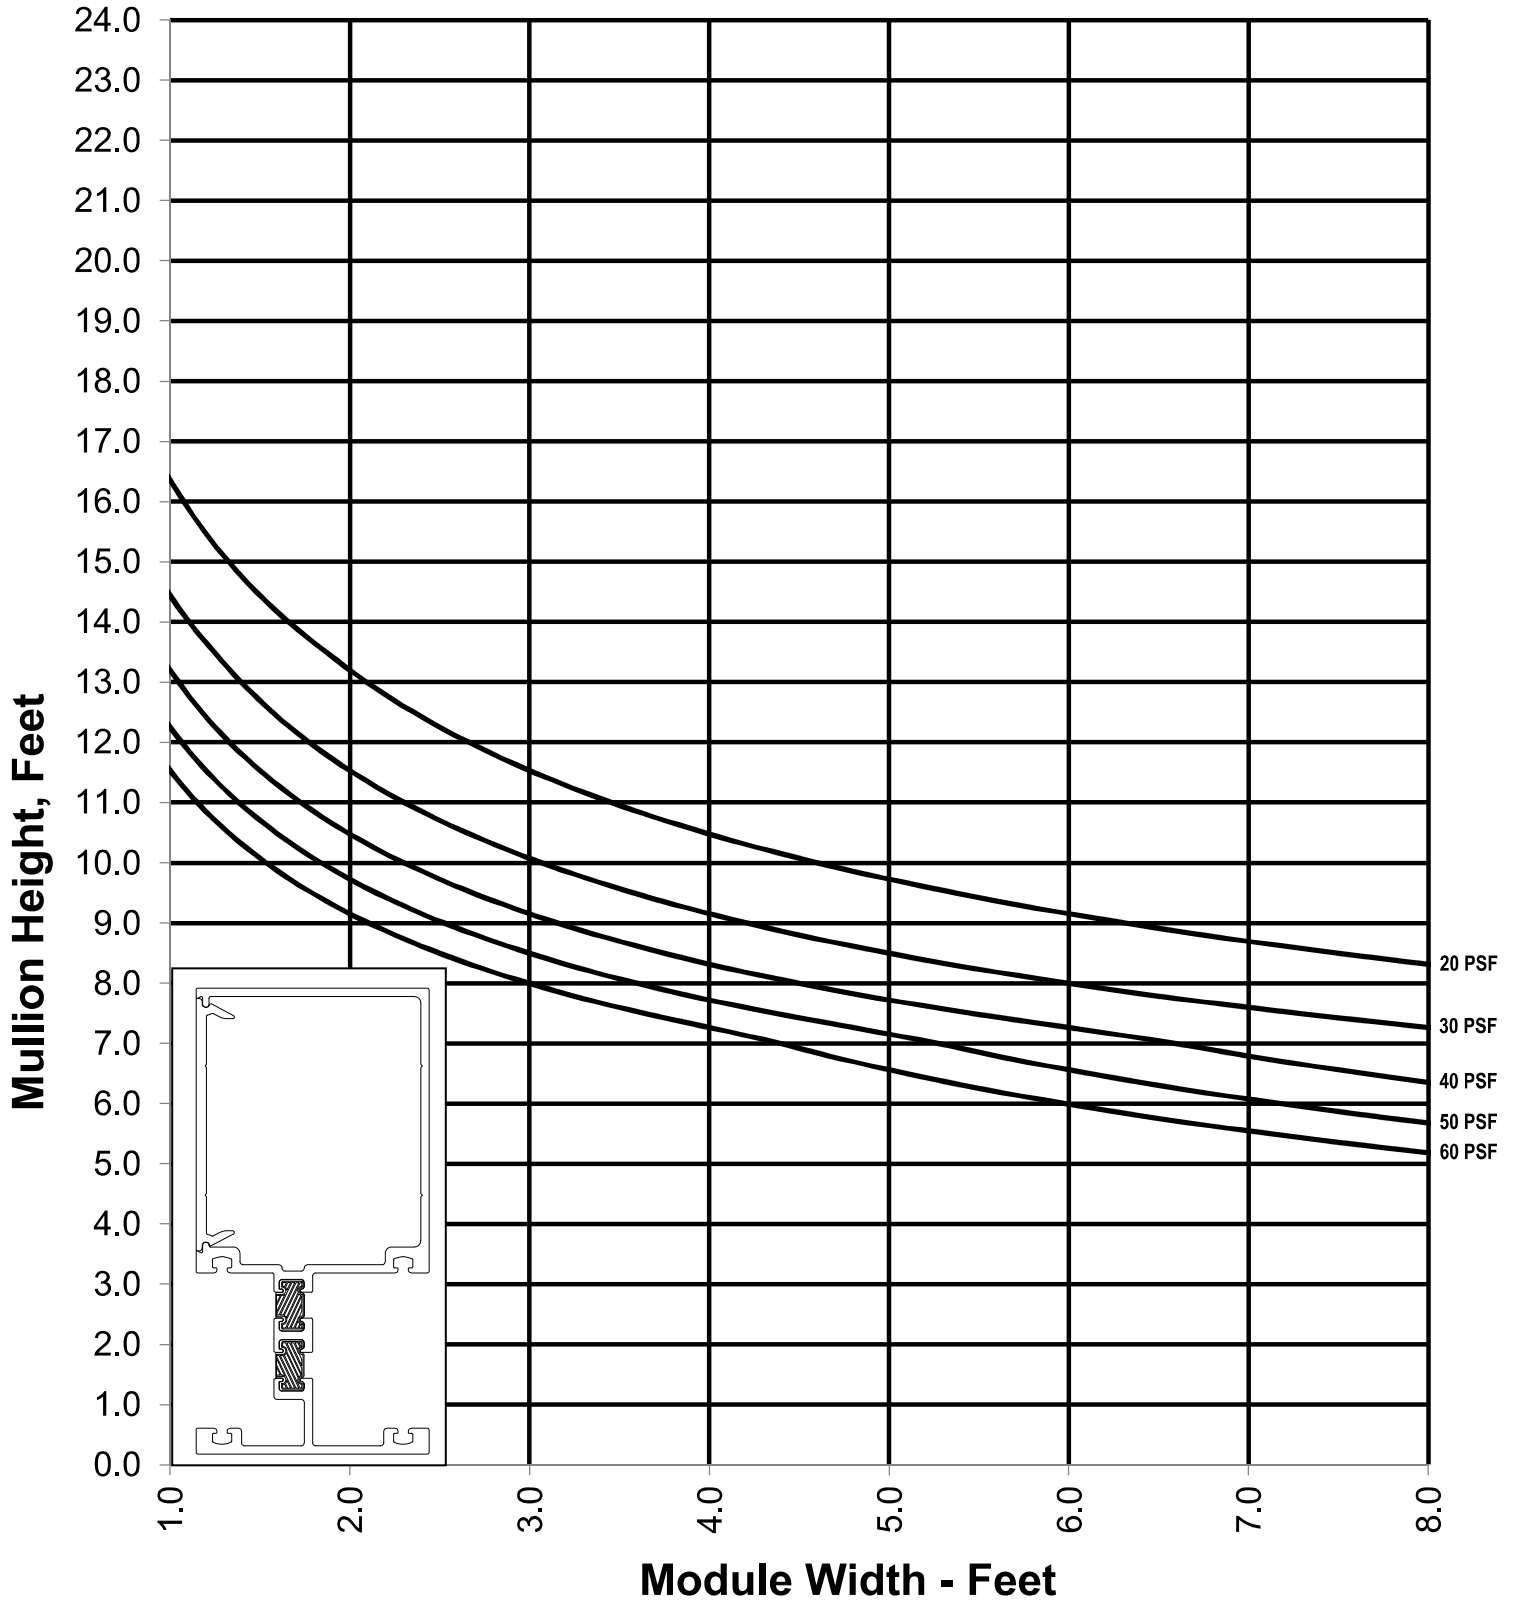

# TU9454\_E9451

System: \900RW  
 Typical Use Vertical


Reinforcement None  
 I = 4.03  
 S = 1.59  
 Alloy: 6063 T6

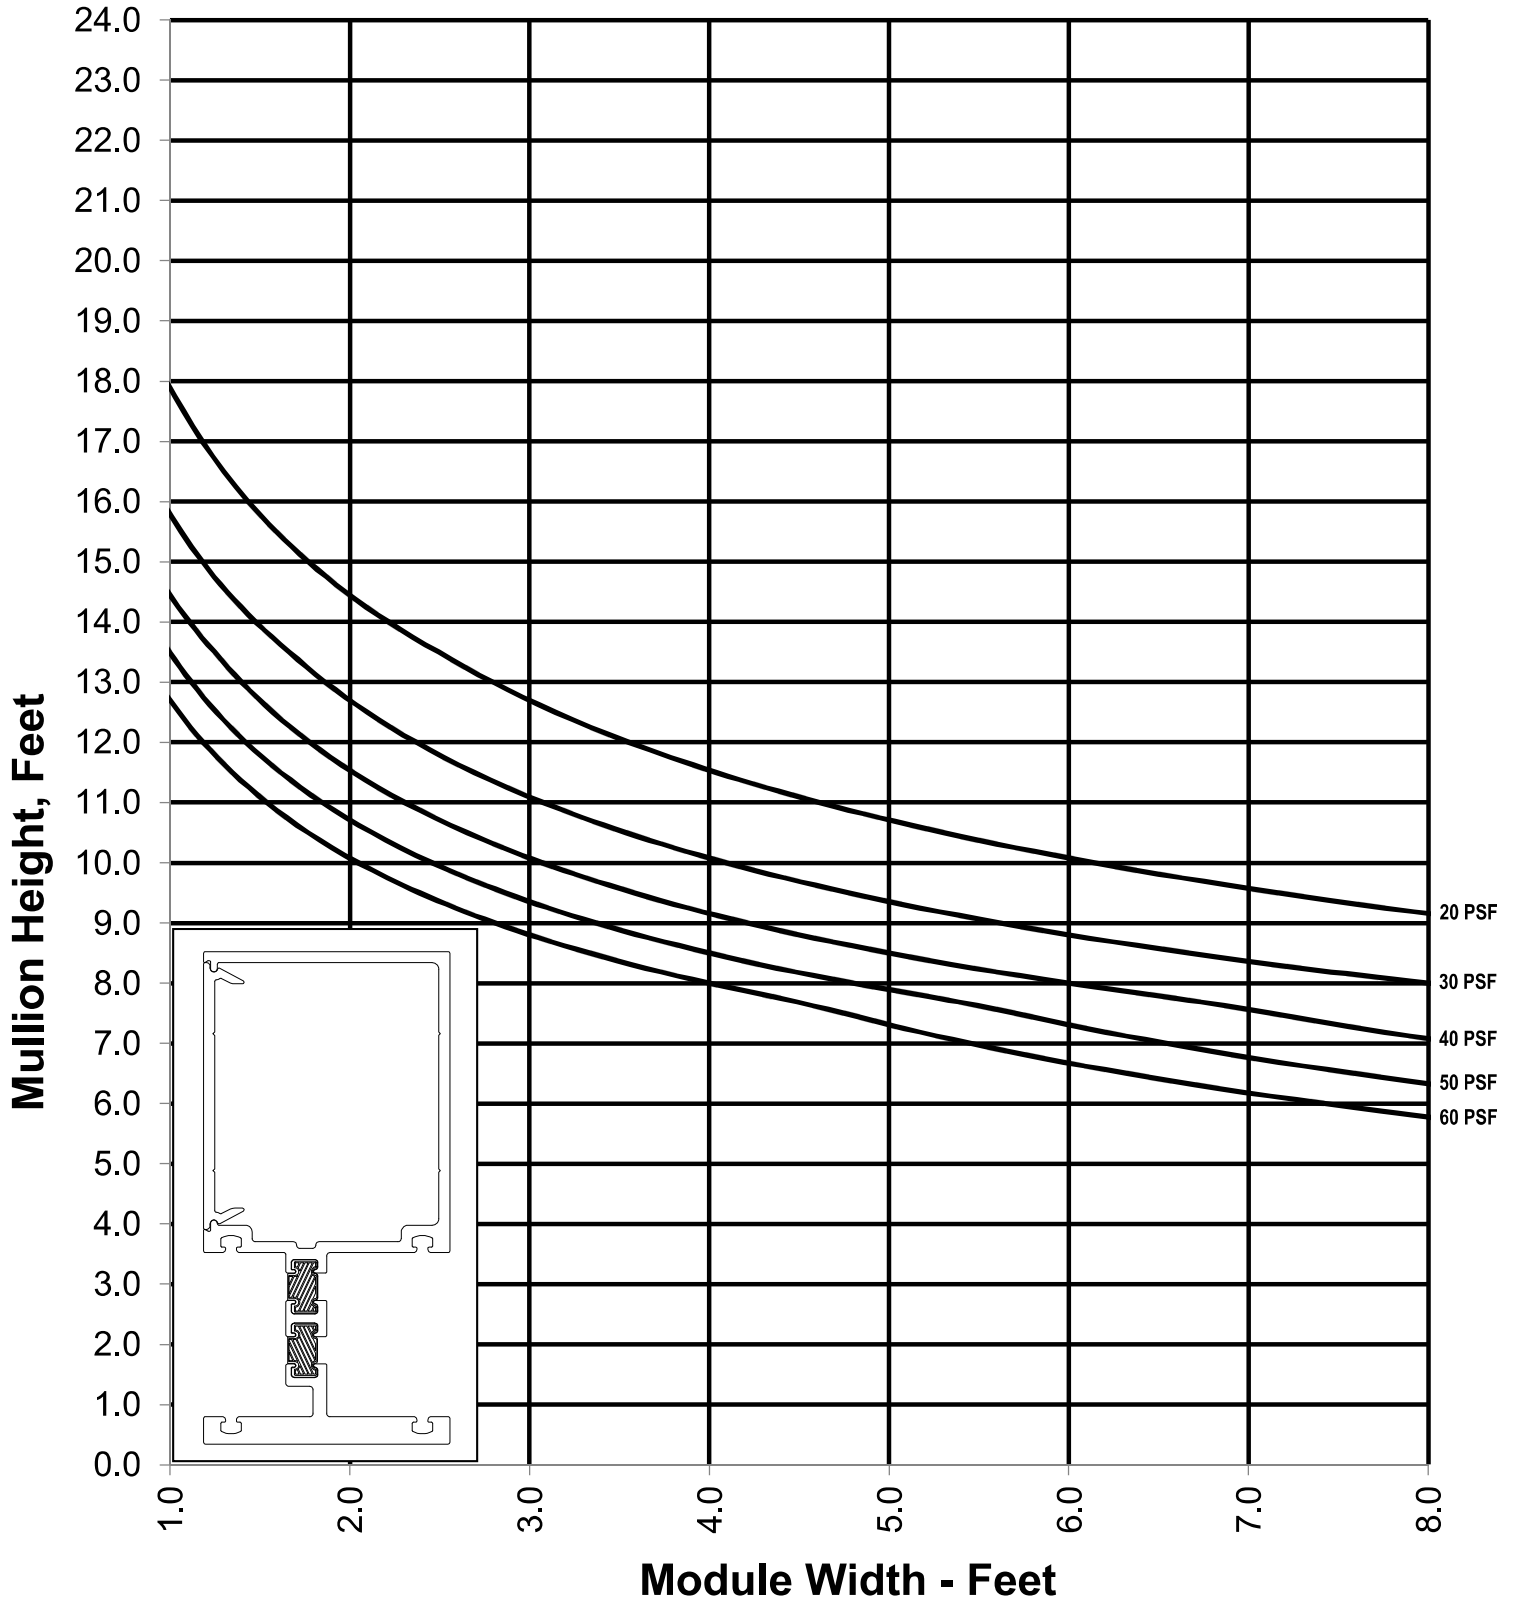

# TU9452\_TU9453

System: \900RW  
 Typical Use Vertical Expansion Mull


Reinforcement None  
 I = 5.98  
 S = 2.51  
 Alloy: 6063 T6

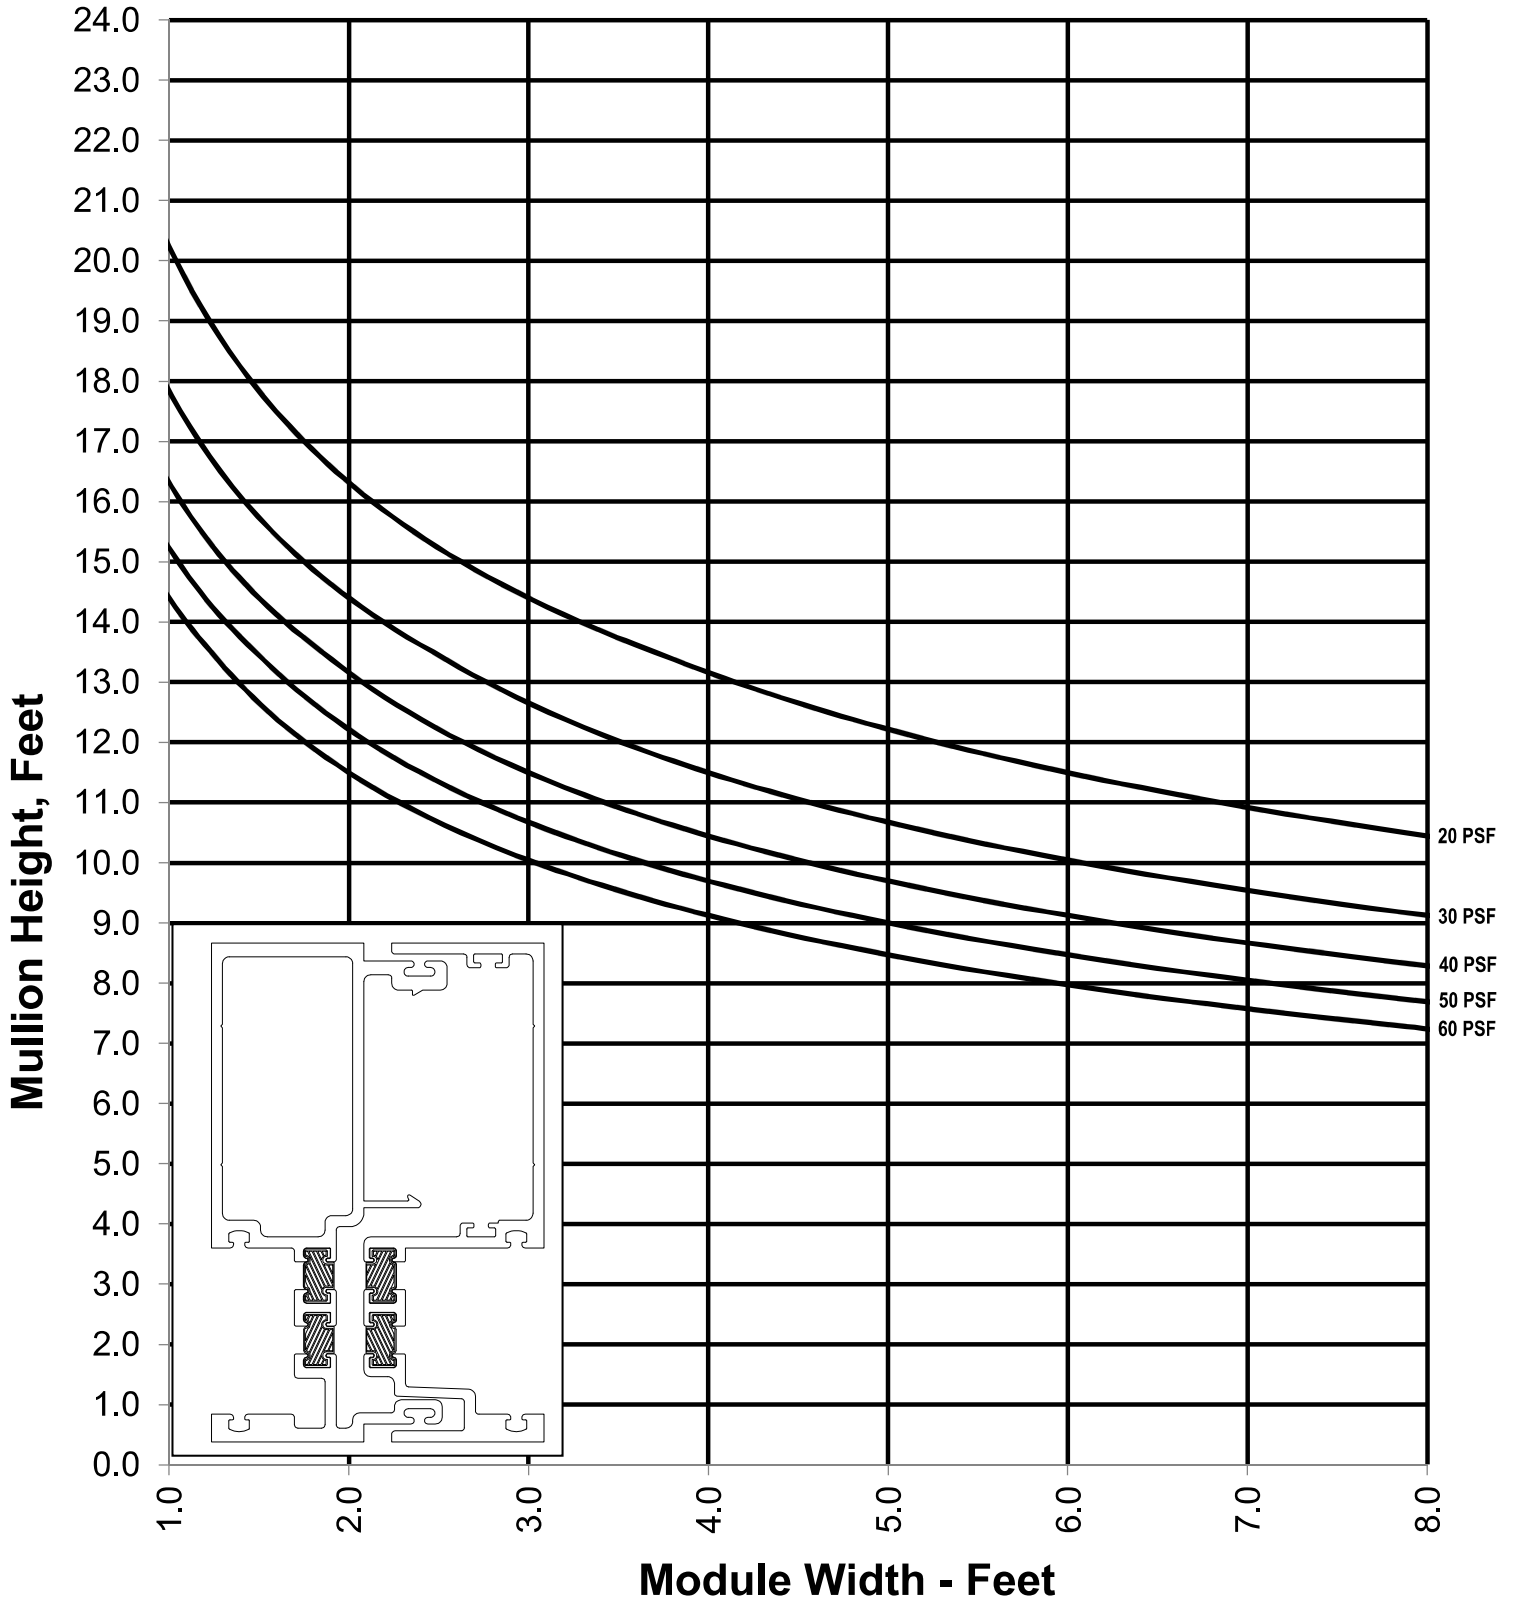

# E9430

**System:** \900RW  
**Typical Use** Vertical Silicone Glazed


**Reinforcement** None  
**I =** 1.19  
**S =** 0.86  
**Alloy:** 6063 T6

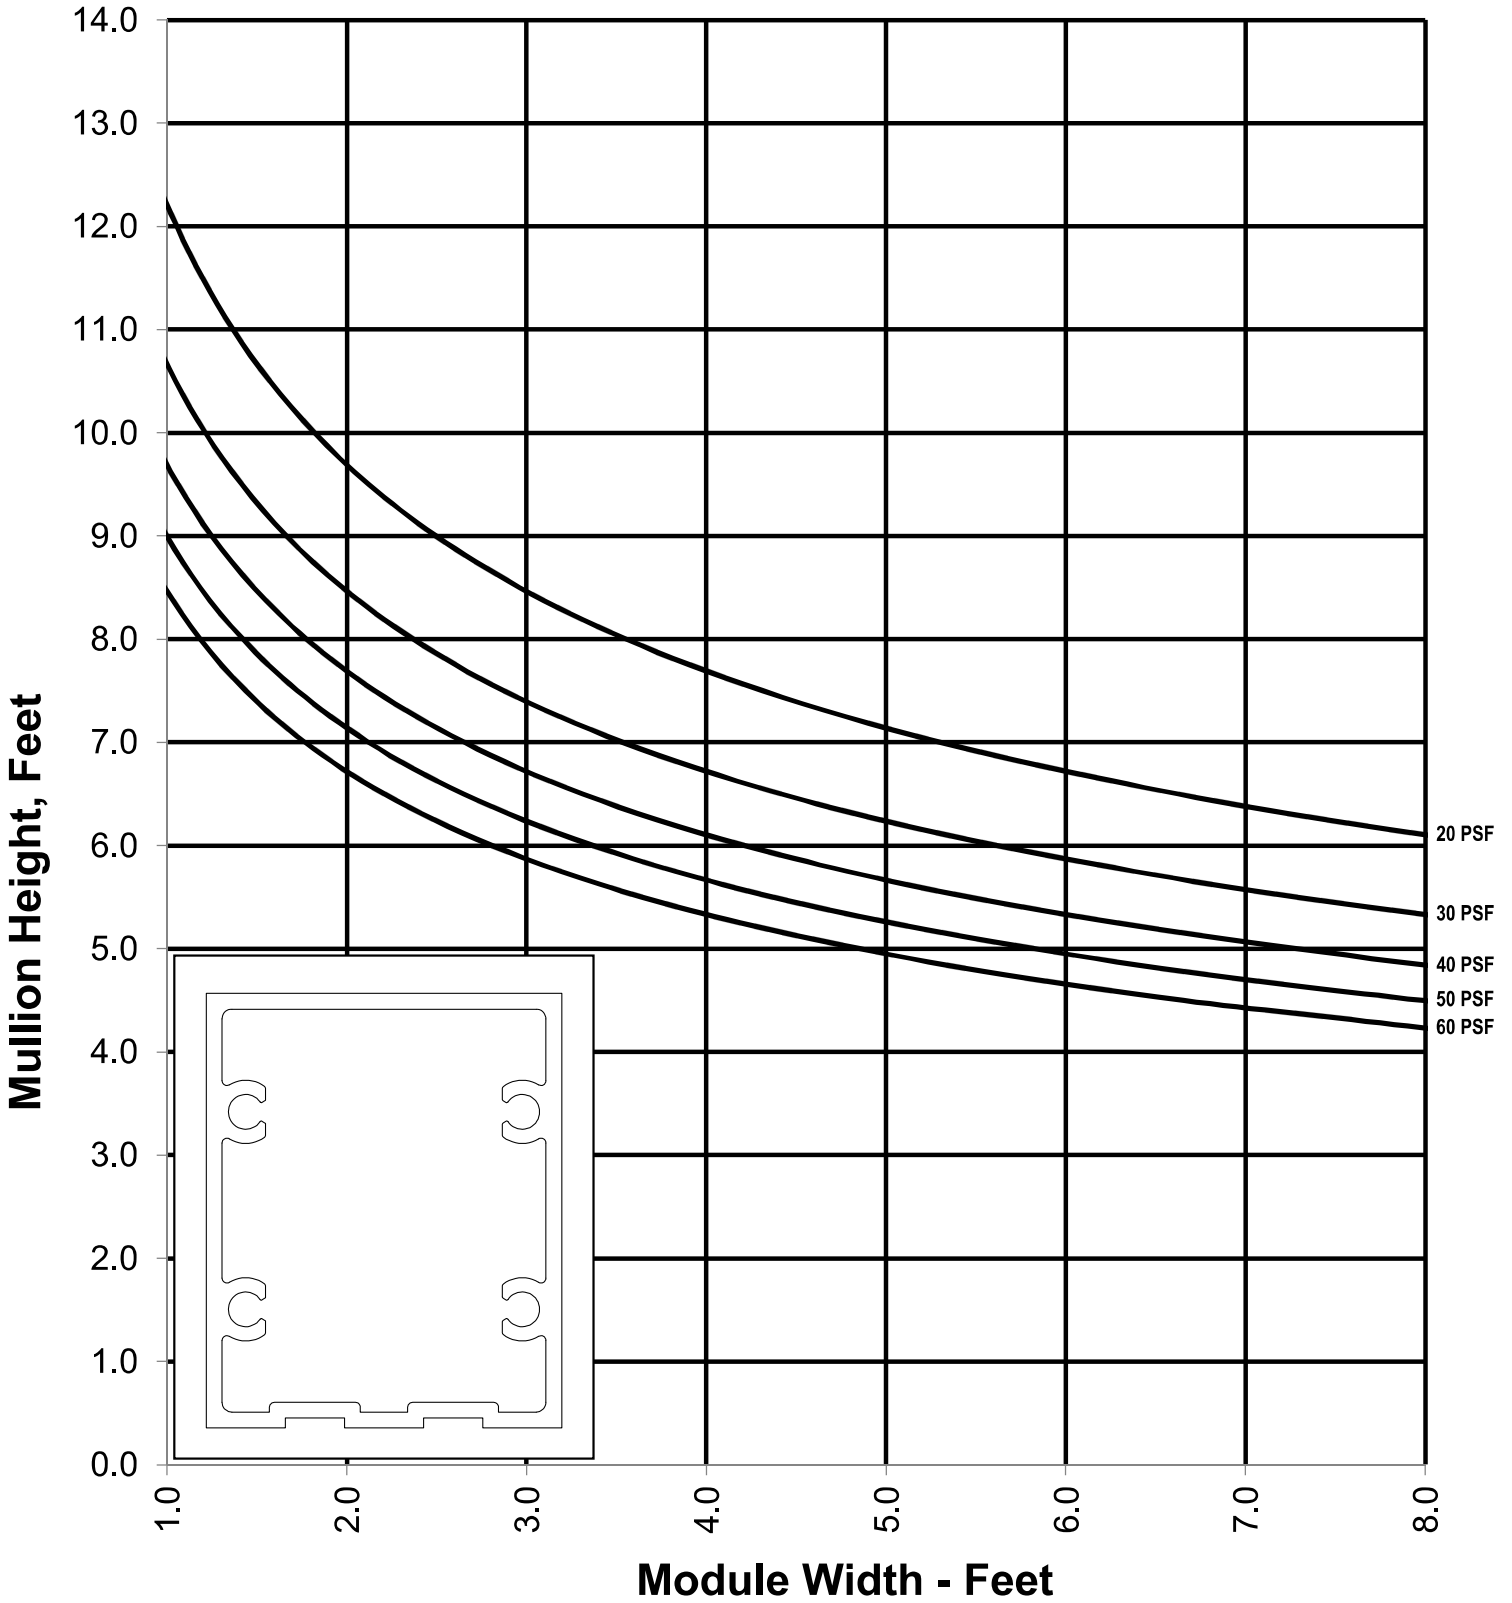

# A944041\_TU9453

**System:** \900RW  
**Typical Use** Corner 90 degree

**Reinforcement** None  
**I =** 13.1  
**S =** 2.96  
**Alloy:** 6063 T6

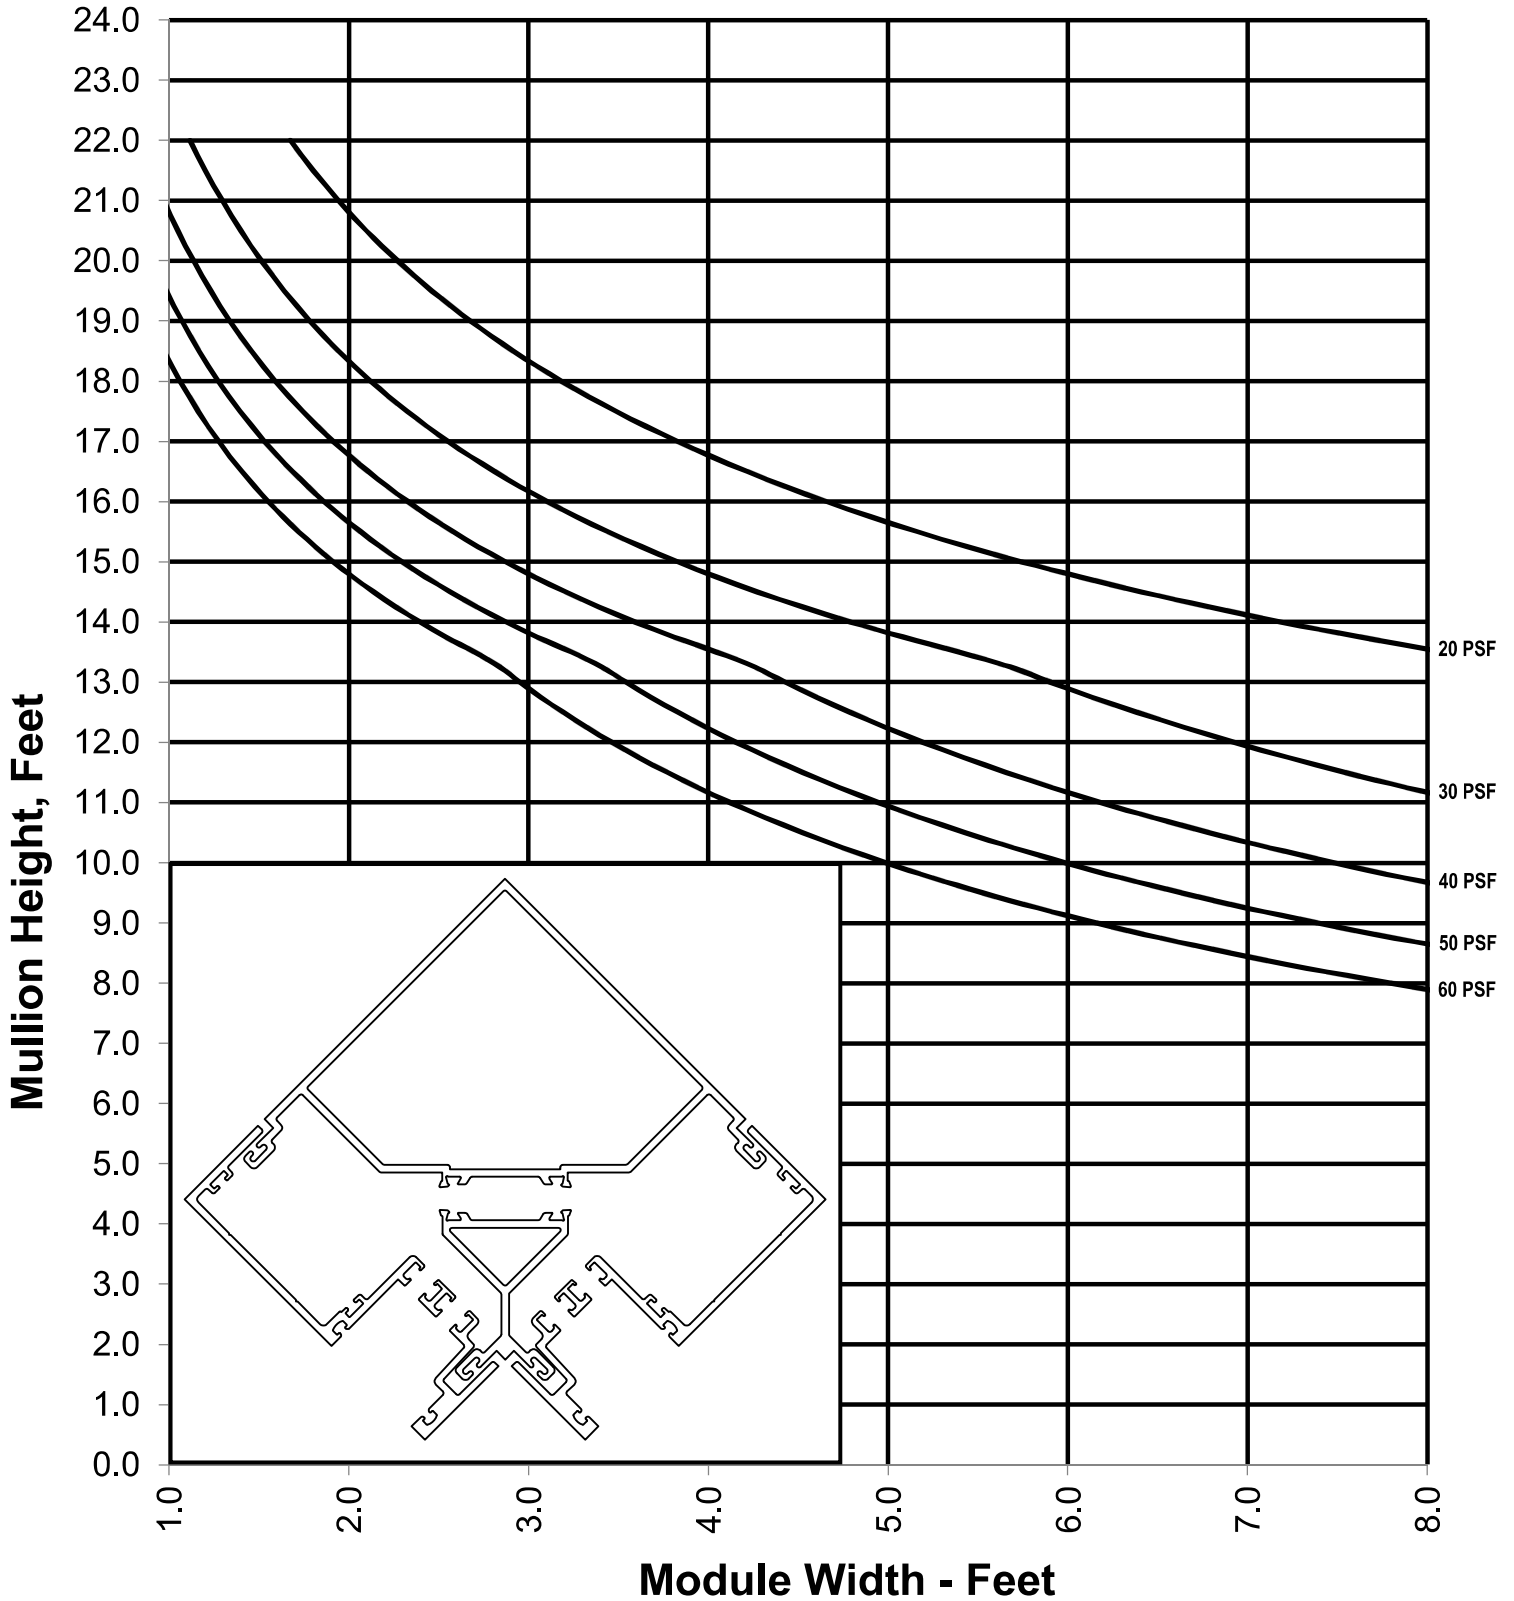

# A944243\_TU9453

**System:** \900RW  
**Typical Use** Corner 135 degree

**Reinforcement** None  
**I =** 8.75  
**S =** 3.04  
**Alloy:** 6063 T6

