


TU9650_E9651

System: \900RW
Typical Use Vertical


Reinforcement None
I = 3.72
S = 1.71
Alloy: 6063 T6

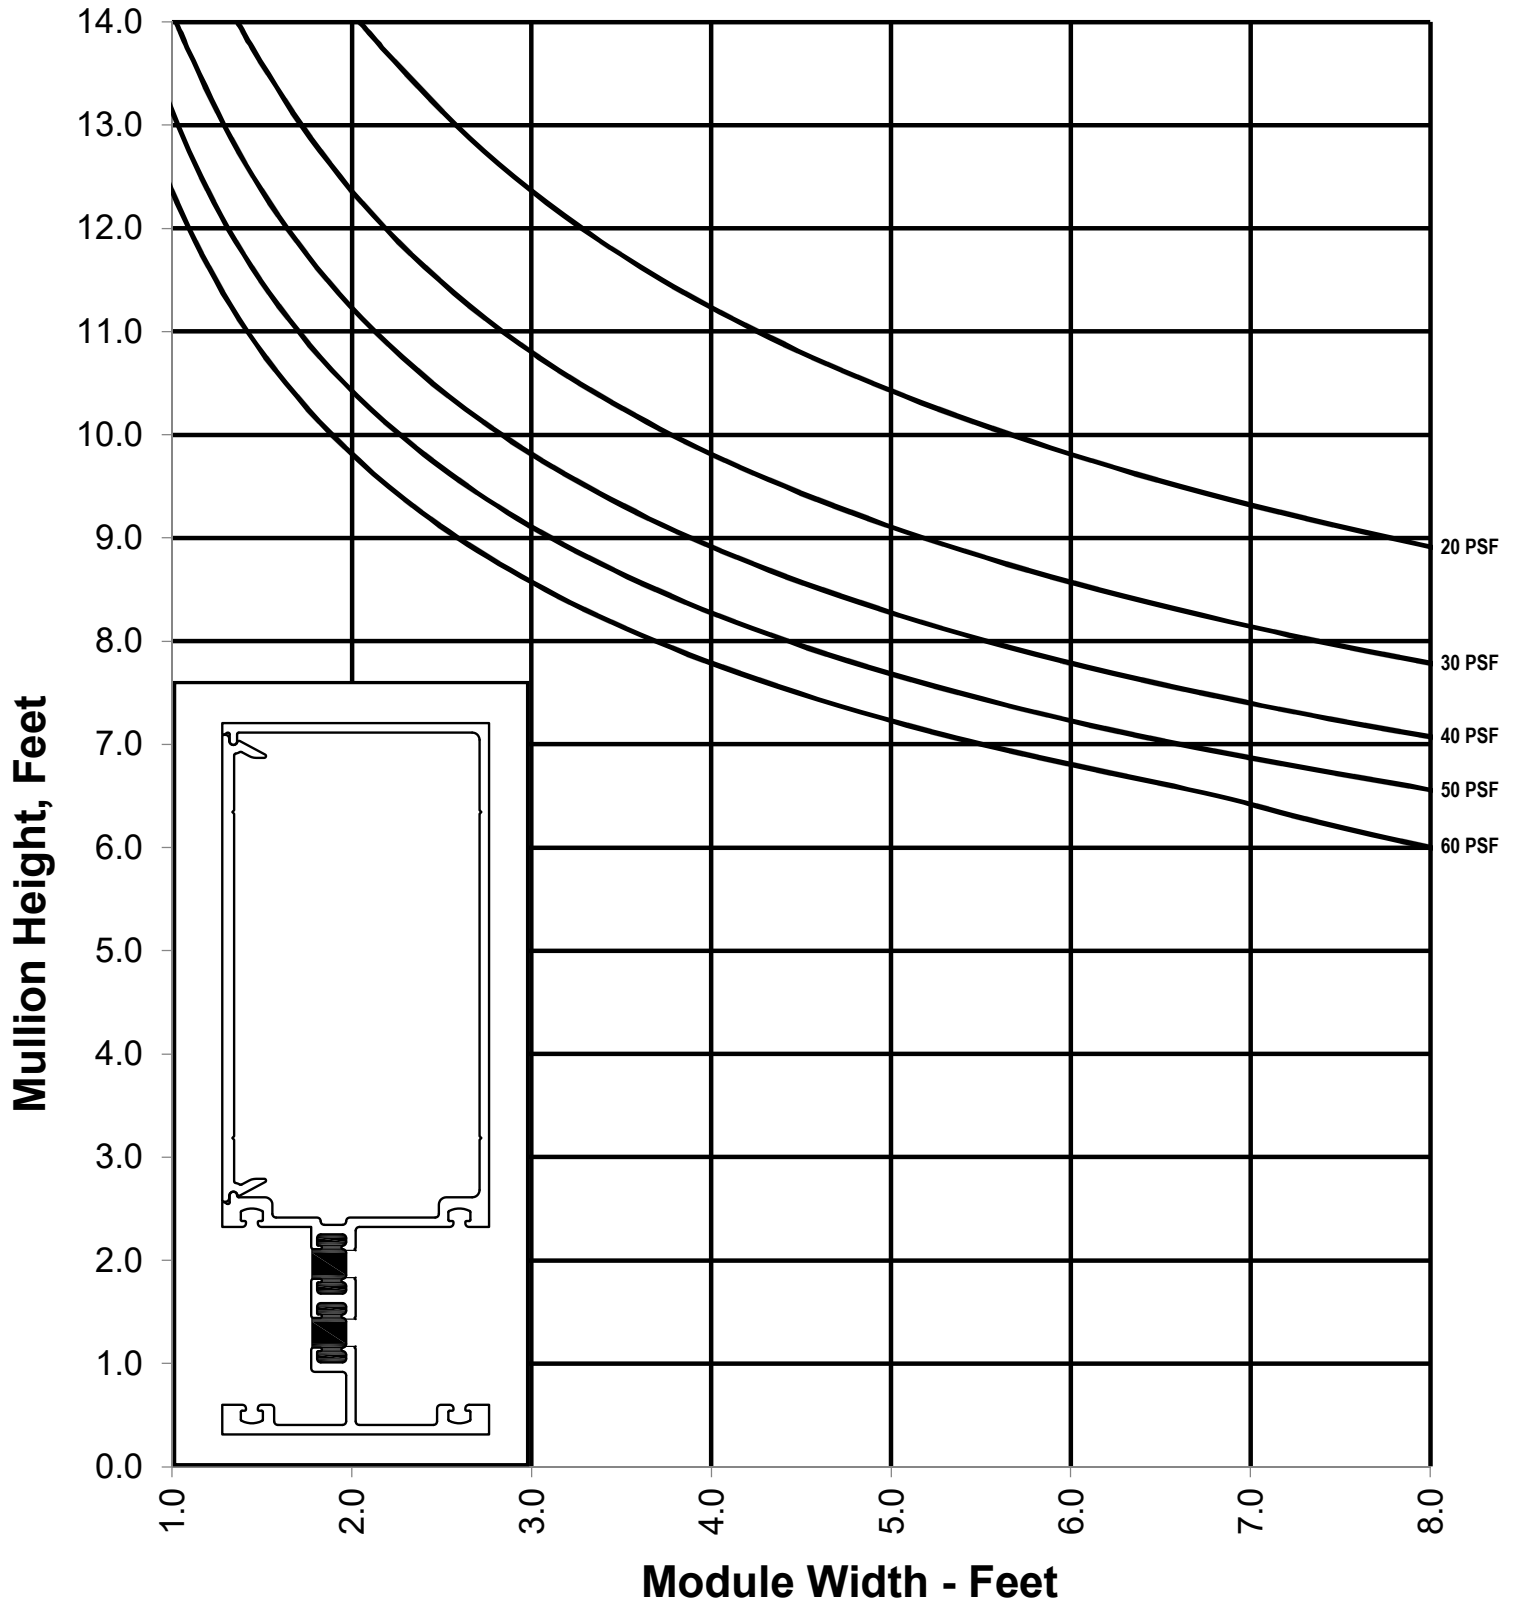

TU9654_E9651

System: \900RW
 Typical Use Vertical

Reinforcement None
 I = 7.39
 S = 2.17
 Alloy: 6063 T6

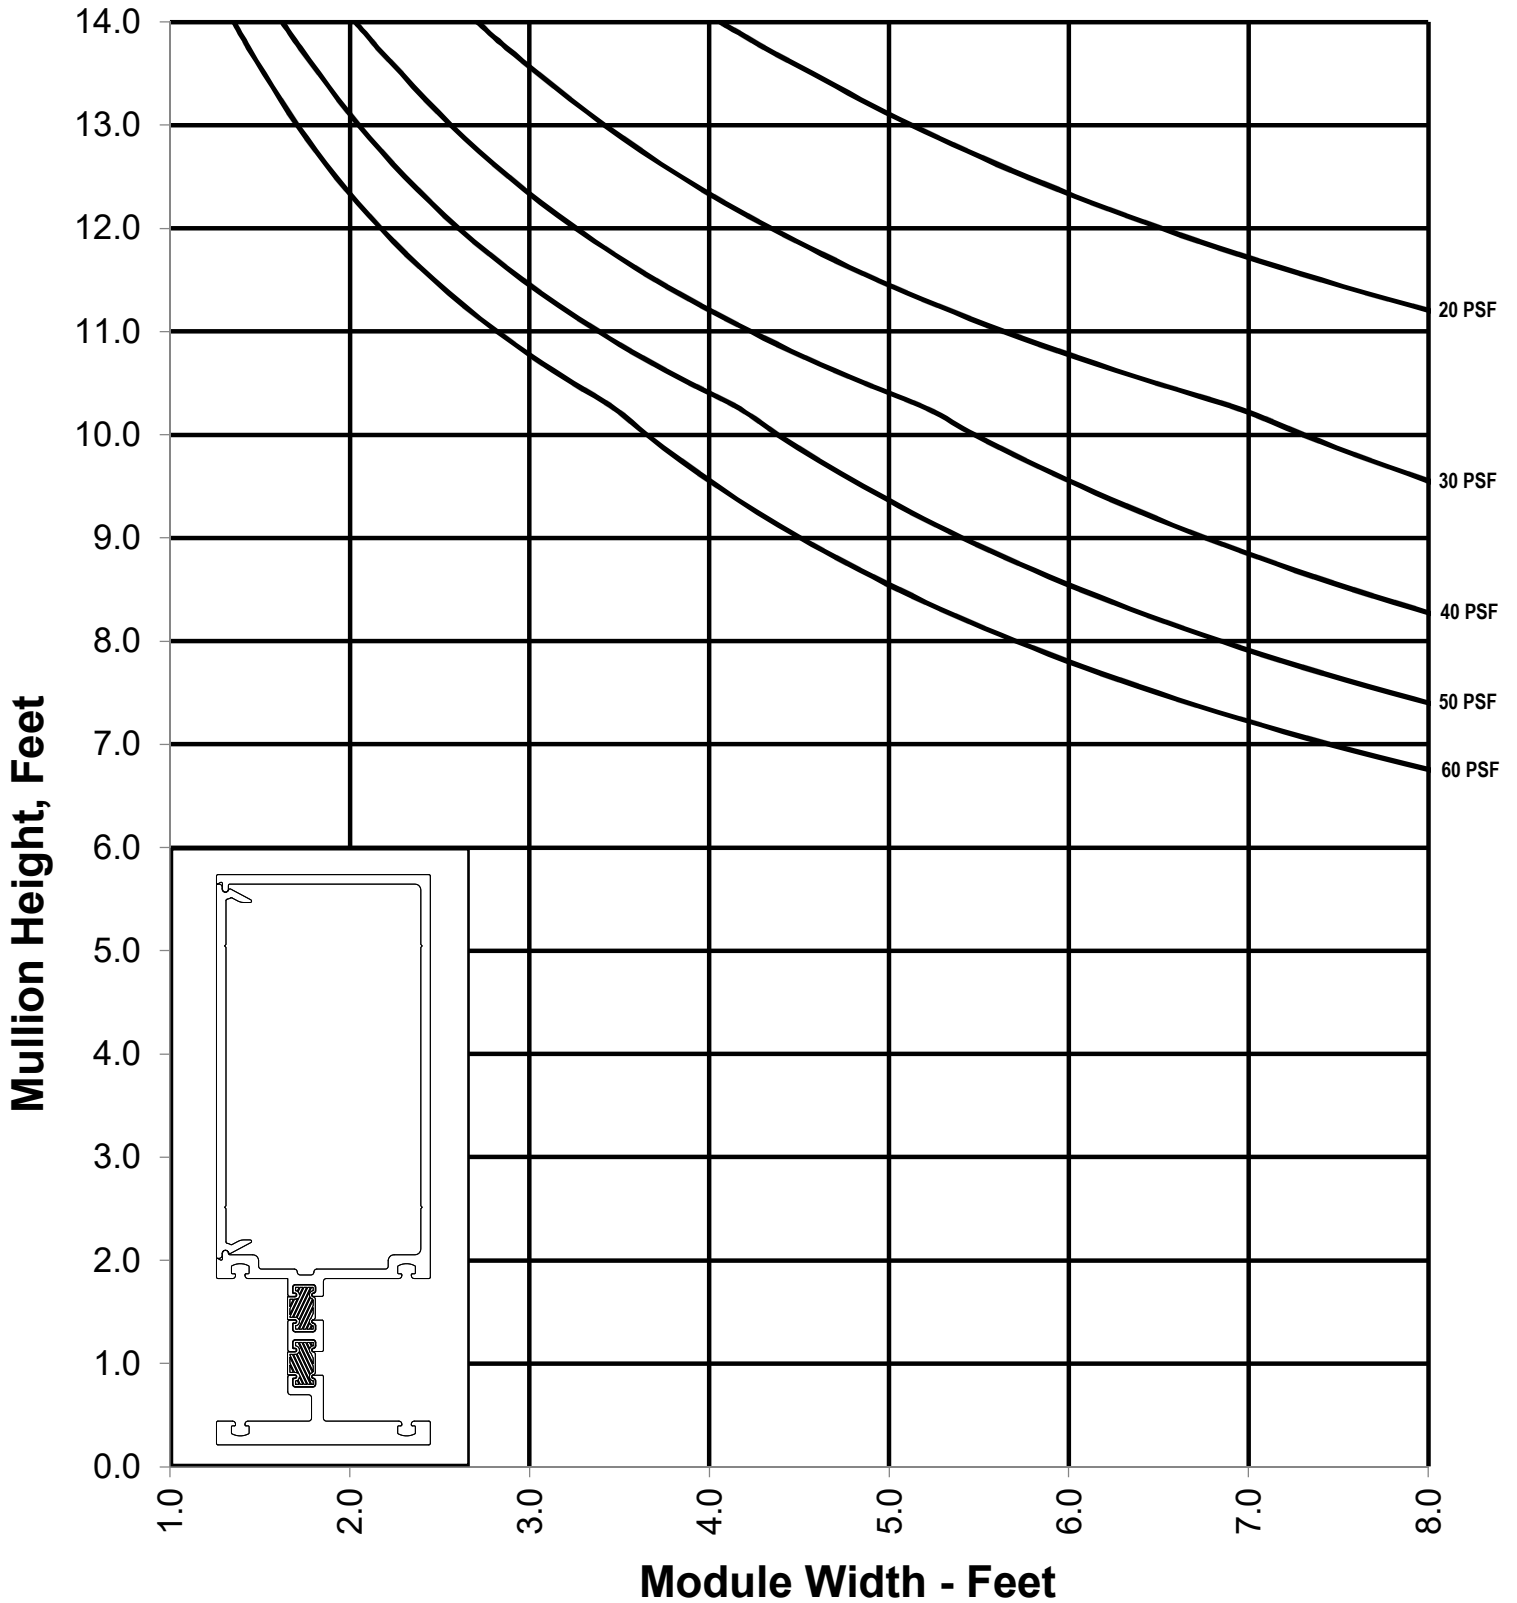

TU9652_TU9653

System: \900RW
Typical Use Vertical Expansion Mull

Reinforcement None
I = 12.3
S = 3.82
Alloy: 6063 T6

